

## Agri-Alert 128 V2.0 Software Update Procedure

1. Insert the USB drive with the upgrade software downloaded from the internet. The USB port is located on the back side of the front cover.





- 2. Log in as Master or Installer (Password 0129)
- 3. Click on the menu icon in the top left corner
- 4. Click on the System menu item

📃 🔔 🌾	02-12-2015 12:11 PM ᡧ 🤇 🔒 📼  C 🔎 EN						EN ?	
🔒 Disarm		2	з 🌾	4 🔶	5	6	7	
History	E, IL .3°C	external te 20.9°C	ZONE 3	PROUT	HALLWAY	WATER PRES	FARROW 4	
🔅 System		11	12	13	14	15	16	
	_s \	PULSE SPEED	ZONE 12	EXTERNAL TE	EXTERNAL TE	EXTERNAL TE	EXTERNAL TE	
17 EXTERNAL TE								

5. In the System menu, Select the Settings option





6. In the Settings menu, select Software Info

<b>↓</b> ×,	02-12-2015 12:12 РМ 🙌 📞 🔒 🧰 😅 🚅					
<b>C</b> General settings	L Time and units	Phone settings	Intrusion arming			
Alarm central	Ethernet settings	<b>U</b> Power settings	Status and ID			
Software Info						

- 7. In the Software Info menu, press the pencil icon, then
- 8. Press Upload software

<b>-</b>	<b>\$</b> .	02-12-20	015 12:13 PM	G 🚍	C 7.	EN	?
	Hardware rev. : 02 Base firm. : 03.01.0000 Top soft. : 1.1-0 - b1838		, AT	•	Software Inf	0	
General	File						
	Upload software						

- 9. From there, select the file you wish to use for the update, and follow the onscreen instructions. The device will reboot after completing the update.
- 10. Remove the USB drive and close the front door.